

Vernon Clock Operation

TURN CLOCK ON, USING SWITCH ON RIGHT SIDE OF BOX

Computer will ask if you want to start where you left off? **NO**

Computer will ask for Model #, it's **008-3261**, also printed on face of console

Computer will ask if you want shot clock? **NO**

Computer will ask if you want penalty time out? **NO**

SETTING WARM UP TIME:

Press **SET**

Press **TIME** Enter time (5 minutes would be 05:00), **MUST** enter **COLON**

Press **YES**

Computer will ask what period, enter **1**

Start the clock by using the hand held clicker, clock will begin to run

SETTING UP SCOREBOARD:

Press **SET**

Press **HOME SCORE**

Press **0**

Press **SET**

Press **GUEST SCORE**

Press **0**

Press **SET**

Press **HOME SHOTS**

Press **0**

Press **SET**

Press **GUEST SHOTS**

Press **0**

SETTING FIRST PERIOD:

Press **SET**

Press **TIME** Enter time (12 minutes would be 12:00), **MUST** enter **COLON**

Press **YES**

Computer will ask what period, enter **1**

Start the clock by using the hand held clicker, clock will begin to run

SETTING SECOND & THIRD PERIODS:

Press **SET**

Press **TIME** Enter time (12 minutes would be 12:00), **MUST** enter **COLON**

Press **YES**

Computer will ask what period, enter **2 OR 3**

Start the clock by using the hand held clicker, clock will begin to run

RECORDING SCORE:

Press **HOME SCORE OR GUEST SCORE**

Press **1** Computer will add # of shots to tally already displayed.

IF AT ANY TIME YOU MAKE A MISTAKE & NEED TO ADJUST SCORE

Press **HOME SCORE OR GUEST SCORE**

Press Actual Score (i.e. 2, 3, etc)

SETTING A PENALTY

Press **SET**

Press **HOME PENALTY OR GUEST PENALTY**

Enter Time **01:30, 2:00, etc. MUST** enter **COLON**

Press **YES**

Enter Player # **MUST** always be **TWO DIGITS**

Player # will not appear on scoreboard, but you still have to enter on console

**If you have a 3rd penalty, enter it following same steps, computer knows to start 3rd period upon completion of 1st penalty

CLEARING A PENALTY

Press **HOME PENALTY OR GUEST PENALTY**

PRESS **PENALTY CLEAR**

Press **YES**

Enter Player Number **MUST** always be **TWO DIGITS**

TRACKING HOME & GUEST SHOTS ON GOAL

Press **HOME OR GUEST SHOTS**

Press **1** Computer will add # of shots to tally already displayed. If you want to add 2 SOG, Press Home or Guest Shots and Press 2

HANDHELD CLICKER

Use to start/stop clock

ORN BUTTON

Press **HORN** if you need to call players out of locker rooms to start game

TURN CLOCK OFF, USING SWITCH ON RIGHT SIDE OF BOX

Weibel Clock Operation

TURN CLOCK ON, USING SWITCH ON RIGHT SIDE OF BOX

Computer will ask if you want to start where you left off? **NO**

Computer will ask for Model #, it's **841**, also printed on face of console

Computer will ask if you want shot clock? **NO**

Computer will ask if you want penalty time out? **NO**

SETTING WARM UP TIME:

Press **SET**

Press **TIME** Enter time (5 minutes would be 05 00)

Press **YES**

Computer will ask what period, enter **1**

Start the clock by using the hand held clicker, clock will begin to run

SETTING UP SCOREBOARD:

Press **SET**

Press **HOME SCORE**

Press **0**

Press **SET**

Press **GUEST SCORE**

Press **0**

Press **SET**

Press **HOME SHOTS**

Press **0**

Press **SET**

Press **GUEST SHOTS**

Press **0**

SETTING FIRST PERIOD:

Press **SET**

Press **TIME** Enter time (12 minutes would be 12 00)

Press **YES**

Computer will ask what period, enter **1**

Start the clock by using the hand held clicker, clock will begin to run

SETTING SECOND & THIRD PERIODS:

Press **SET**

Press **TIME** Enter time (12 minutes would be 12 00)

Press **YES**

Computer will ask what period, enter **2 OR 3**

Start the clock by using the hand held clicker, clock will begin to run

RECORDING SCORE:

Press **HOME SCORE OR GUEST SCORE**

Press **1** Computer will add # of shots to tally already displayed.

IF AT ANY TIME YOU MAKE A MISTAKE & NEED TO ADJUST SCORE

Press **HOME SCORE OR GUEST SCORE**

Press Actual Score (i.e. 2, 3, etc)

SETTING A PENALTY

Press **SET**

Press **HOME PENALTY OR GUEST PENALTY**

Enter Time **01:30, 2:00, etc.**

Press **YES**

Enter Player # **MUST** always be **TWO DIGITS**

Player # will not appear on scoreboard, but you still have to enter on console

**If you have a 3rd penalty, enter it following same steps, computer knows to start 3rd period upon completion of 1st penalty

CLEARING A PENALTY

Press **HOME PENALTY OR GUEST PENALTY**

PRESS **PENALTY CLEAR**

Press **YES**

Enter Player Number **MUST** always be **TWO DIGITS**

TRACKING HOME & GUEST SHOTS ON GOAL

Press **HOME OR GUEST SHOTS**

Press **1** Computer will add # of shots to tally already displayed. If you want to add 2 SOG, Press Home or Guest Shots and Press 2, etc.

HANDHELD CLICKER

Use to start/stop clock

ORN BUTTON

Press **HORN** if you need to call players out of locker rooms to start game

TURN CLOCK OFF, USING SWITCH ON RIGHT SIDE OF BOX