

**CENTENNIAL SPORTS ARENA  
SCOREBOARD OPERATION**

**TURN SCOREBOARD SWITCH TO ON**

**ENTER CODE 63** when prompted, press **ENTER**

**SETTING TIME:**

Press 

Set Time
-------------

, enter numbers for desired time, press **ENTER**. Please remember to add an extra zero when using tenths of a second.

**GOALS AND # PENALTIES:**

When either the home or guest scores a goal, press 

score +1
-------------

If you need to change the score, press 

score *
------------

, number, and **ENTER**.

Using the # of penalties, follow the same procedure.

**PENALTIES: Setting time-**

**For setting two minute penalties:**

Press 

Player Penalty
-------------------

, press **ENTER**, enter player number, press **ENTER**, press **ENTER** a second time to display penalty on scoreboard. The scoreboard is programmed for two minute penalties.

**For setting penalties that are more than two minutes:**

Press 

Player Penalty
-------------------

, press **ENTER**, enter player number, press **ENTER**, enter the amount of time, press **ENTER**.

**To clear a penalty:** Press 

Player Penalty
-------------------

, press 

↑
---

 arrow key to select penalty to be cleared, press **CLEAR**, then press **ENTER**. \*\*\*\*When clearing a penalty, the computer thinks you are adding a second penalty and the number 2 will be flashing in the left hand side of the display window; you must now use the arrow keys to get the penalty you want to clear. In this instance, you pushed the up arrow and it went to the first (#1) penalty and cleared it. The arrow keys allow you to change or clear any penalty. The top penalty is #1, the bottom penalty is #2. The #3 penalty is not shown because the third penalty cannot start until one of the first two has expired. However, you may program in the third penalty and it will automatically kick in when one of the other two penalties expires.

**PERIODS:**

Period  
\*

Press **ENTER**, enter period number desired, press **ENTER**.

Note: Period 4 is overtime.

**ENABLE PENALTIES:** Penalty time runs in sync with game time.

**DISABLE PENALTIES:** Penalty time will not run until you push enable. (This is used for running time periods. Penalties start at drop of puck.)

**TROUBLE SHOOTING**

BOTH Scoreboards under CODE 63

**PROBLEM**

**SOLUTION**

Scoreboard buzzes, 88 is the only number on the board.

Check connections. Enter code 63.

Penalty will not come up on the scoreboard.

Not entering proper keys. See PENALTIES on other side.

Penalty time will not run in sync with game.

Push ENABLE penalties on scoreboard panel.

Cannot clear penalty from board.

Use arrow keys to find proper penalty to clear.

Overtime period light not on.

Overtime is period 4.

Most errors are the result of going too fast or not entering commands properly. This is a computer and needs to be told what to do. Simply hitting the clear button and entering does not tell the computer WHAT to clear. If you have further problems, ask the attendant on duty.