

Score Clock Instructions

Turning on Clock:

1. Turn Power switch, in rear of counsel.
2. When prompted press enter to resume, as the screen indicates.
It may take a second for the scoreboard to light up

Setting Time:

1. Press “set main clock”.
2. Enter desired time, including seconds.
3. Press “enter”.

Entering Penalties:

1. Press “player penalty” for either home or away.
2. Enter player number (must be two digits). Since number don't show on clock, type any number.
3. Press “enter”. This will automatically default to a 2:00 penalty. If the penalty is 2:00, hit “enter” again.

***If the penalty is different than 2:00, then it needs to be entered manually.
Then press “enter”***

Deleting Penalties:

1. Select “delete penalty” (home or away)
2. The system automatically defaults to the most likely penalty to be deleted. If another penalty needs to be deleted instead, us the “up and down” arrows to select the correct penalty for deletion.
3. Press “enter”

Entering Goals:

Press +/- to change goal totals

Periods:

Press +1 to increase