


GAME CLOCK – NORTH RINK

Setting the Main Clock

- Press “Set Main Clock”
- Key in Time
 - Warm-ups are 4:00 (“400”)
 - Tourney Games are 15:00 (“1500”)
 - Time between periods is 1:00 (“100”)
- Press “Enter”

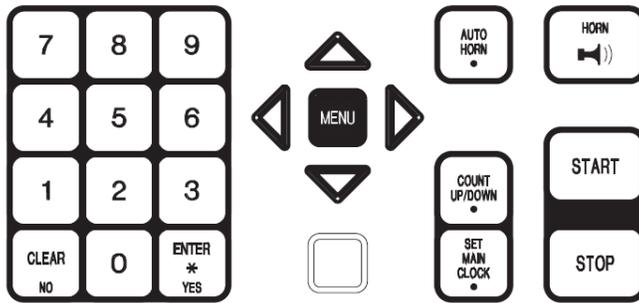


Starting/Stopping the Main Clock

- Use the Green (“Start”)/Red (“Stop”) buttons on the right side or the remote control

To Set Periods:

- Press “Period ●” (this edits the period number)
- Press “1” for first period
- Press “Enter”
- For subsequent periods, Press “Period +1” (increments the period number by one).

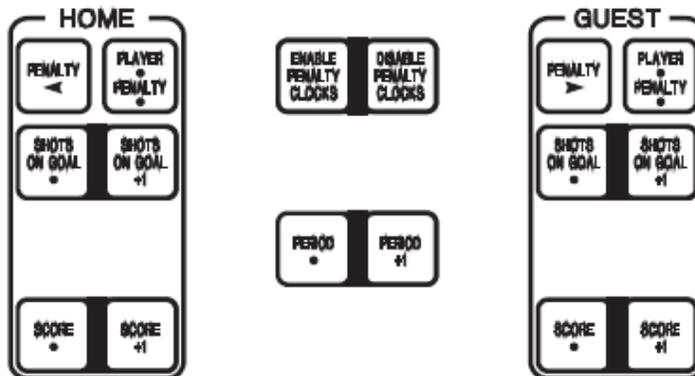

Recording Goals:

Go to Home or Guest Section:

- Press “Score +1” (increments the team score by one)
 - If edits are needed, Press “Score ●”
 - Key in correct number of goals
 - Press “Enter”

GAME CLOCK – NORTH RINK

Shots on Goal:

Go to Home or Guest Section:

- Press “Shots on Goal +1” (increments the number of shots on goal)
 - If edits are needed, Press “Shots on Goal ●”
 - Key in correct number of shots on goal
 - Press “Enter”

Entering Penalties:

Go to Home or Guest Section:

- Press “Player Penalty”
- Press “Enter” (on right side of Console at number keypad)
- Key in Player Number (i.e., penalty on #7) using number keypad
- Press “Enter” (clock will default to 2:00 penalty time)
 - Key in Penalty Time if different from 2:00 default (i.e., “500” for 5:00) using number keypad
- Press “Enter”

If there are multiple penalties for a team at the same time, you can add more as follows:

- Press “Player Penalty”
- Press “Enter”
- Key in Player Number (i.e., penalty on #7)
- Press “Enter”
 - Key in Penalty Time if not 2:00 default (i.e., “1000” for 10:00 penalty)
- Press “Enter”

There are 6 memory slots for penalties and the up/down arrow keys can be used to scroll through the penalty memory.

Editing Penalty Time:

Go to Home or Guest Section:

- Press “Player Penalty”
 - If you need to access a different penalty than last one entered, use the up arrow key to scroll through the penalty memory.
- Press “Enter” (once at correct spot in penalty memory)
- Press “Enter” and 2:00 default will display
 - Key in Penalty Time if different from 2:00 default
- Press “Enter”

GAME CLOCK – NORTH RINK

Clearing a Penalty:

Go to Home or Guest Section:

- Press “Player Penalty”
 - Use the up arrow key to scroll to the right penalty.
- Press “Clear”
- Press “Enter”
- Press “Clear”
- Press “Enter”

Carrying Over Penalty to Next Period:

Since the clock needs to run for 1:00 between periods and you cannot have the penalty running at the same time, you must do as follows before setting the 1:00 intermission:

- Press “Disable Penalty Clocks” - Stops the penalty clocks

Prior to starting the clock for the next period:

- Press “Enable Penalty Clocks” – Will allow the penalty clock to re-start